

Natural Bed Company




3. Do the same with the centre rail as shown on the previous page – the centre rail will be slightly shorter at the foot-end (this will not be necessary if you have ordered a single bed where no centre rail is required)
4. Then attach the headboard from the back through the side rails and (if not a single bed) centre rail using the long silver bolts and half moon washers. Tighten with the spanner included.



5. Attach the wide slat at the head end as shown above using the brass screws and washers. Then attach the shallow L shape panel across the foot end of the bed frame using the remaining brass screws and washers as shown below:

6.

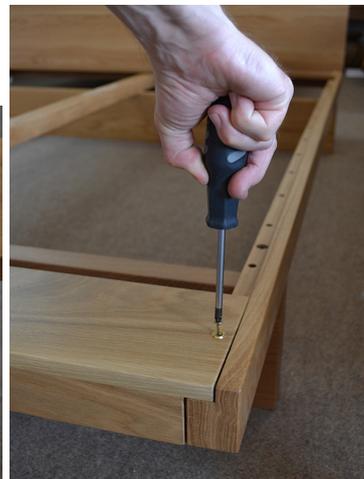

7. Attach the end-caps to the sprung beech slats (see below).
8. Attach the slats to the bed frame as shown below:

Natural Bed Company



9. Ensure the slats are convex (like hills) when placed into the pre-drilled holes.
10. Once the frame has been completed, place the rubberised non-slip mat in the middle of the bed to prevent the mattress from sliding.

We hope you enjoy your Natural Bed Company bed!