

# Natural Bed Company

## Assembly Instructions for [Kulu](#) & [Koo](#) Wooden Beds Single (.90x1.90m)



### Items included in bed flat pack are:


- 1 x headboard panel
- 1 x smaller footboard panel
- 2 x side rails
- 1 x centre rail (not included if you have ordered a single bed)
- 1 x set of sprung beech slats
- 1 x set of double sprung beech slats and sliders
- 1 x set of plastic end caps (2 per slat)
- Fixings:
  - 4x threaded bolts
  - 4x half-moon washers
  - 4x nuts
  - 1x spanner
  - 8x wooden dowels

If you have ordered side tables that attach to the bed frame you will also receive:


- 2x panels that form the 2 tables
- 6x bronze bolts
- 1x small hexagon key

1. Place the wooden dowels in the outer holes at the ends of the side rails, tap these in securely. (As images below) If you have ordered the side tables – ensure the end of the side rail with the additional holes to attach the tables is placed at the headboard end.
2. Screw the four threaded bolts into the middle holes of the headboard and footboard panels. (See images below)

# Natural Bed Company

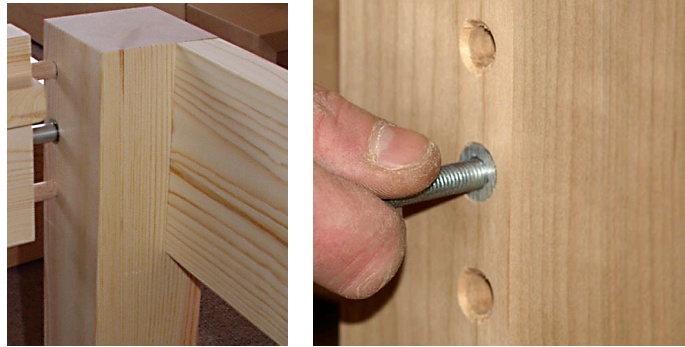

3. Attach the side rails to the footboard panel (see images on the previous page), then loosely secure using the half-moon washer and the nut with the spanner provided (see image below). In the same way attach the side rails to the headboard to create a full bed frame.

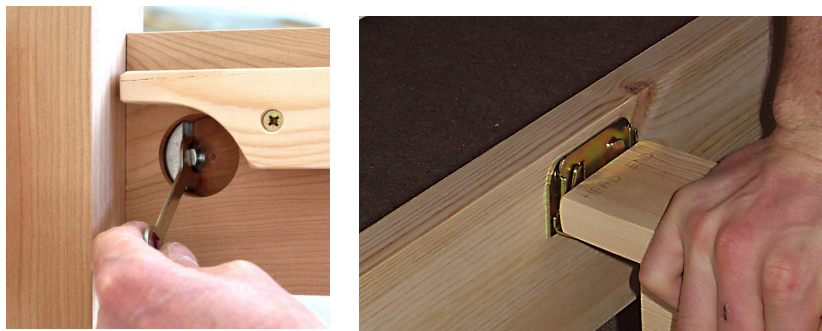

4. Ensure the frame is 'square' then fully tighten all of the nuts with the spanner.
5. Lower the centre rail onto the brackets and push down firmly into position – see second image above (unless you have ordered a single bed; these do not come with a centre rail)

**NB: If you have ordered side tables:** Present the table to the headboard and pass the bronze bolts through the headboard from the back and into the table (there are numbers stamped into the edge of the table and the bed frame – match the numbers). Tighten with the small hexagon key. Pass the bolts through the side rail, from inside the frame, into the table and tighten. Repeat this process for the other side table.




6. Attach the end caps to the sprung slats (see image below): an end-cap slots on to each end of the slat (ensure the slat curves up in the middle and the 'peg' on the end cap points downwards.)

# Natural Bed Company

7. Attach the slats to the bed frame by slotting the pegs of the end caps into the predrilled holes, which run along the upper side of the inner side rails. (See image below)



Counting from the headboard end, the fourth slat will be a double slat (made up of an upper standard slat to which is attached a lower second slat via a plastic slider) – see image below. Slats 4-9 will be double slats, the others are standard single slats (see image below).

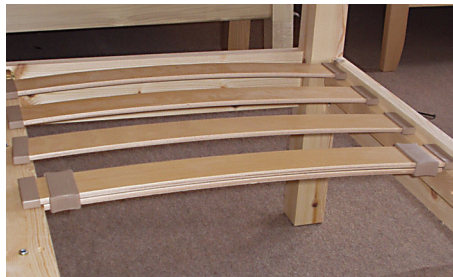

**We hope you enjoy your Natural Bed Company Bed!**