

Natural Bed Company

Orchid Four Poster Bed Assembly Instructions Superking Size (1.80x2.00m)



[View the Orchid on our website](#)


Items included in bed flat pack are:

- 1 x headboard
- 1 x footboard
- 4 x extension posts
- 4 x canopy beams
- 2 x side rails
- 1 x centre rail
- 1 x set of sprung beech slats
- 1 x set of double sprung beech slats with sliders
- 1 x set of plastic end caps (2 per slat)


Fixings:	8x threaded bolts	4x half-moon washers
	4x nuts	1x spanner
	8x wooden dowels	
	4x bronze bolts	1x hexagon key for bronze bolts

1. Place the wooden dowels in the outer holes at the ends of the side rails, tap these in securely. (See images below)
2. Screw the four threaded bolts into the middle holes of the legs of the headboard and footboard panels. (See images below)


Natural Bed Company

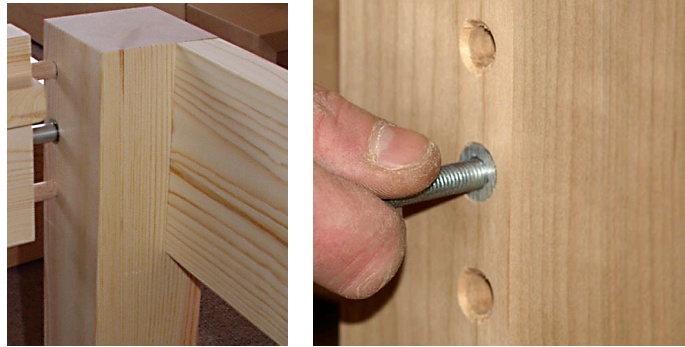

3. Attach the side rails to the footboard legs (see images on the previous page), then loosely secure using the half-moon washer and the nut with the spanner provided (see image below). In the same way attach the side rails to the headboard to create a full bed frame.

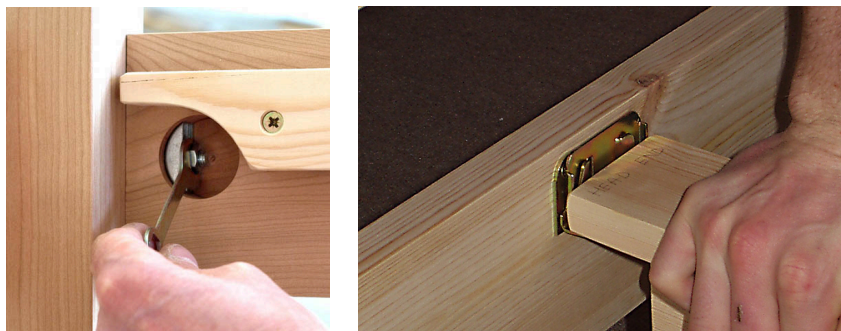

4. Ensure the frame is 'square' then fully tighten all of the nuts with the spanner.
5. Lower the centre rail onto the brackets and push down firmly into position – see second image above (unless you have ordered a single bed; these do not come with a centre rail)
6. Attach the headboard and footboard canopy extensions using the remaining four silver-coloured bolts. Screw these into the top of the headboard and footboard legs. The ends of the posts and the extensions will have numbers stamped into them, by connecting the posts with the matching numbers you will ensure that the grain aligns when the post is 'screwed' on.
7. Again matching the numbers - place the short (across the head and foot ends) top beams onto the top of the extension posts, then place the long (along the length of the bed) beams over these. Connect the beams to the posts with the long bronze bolts and tighten using the hexagon key.

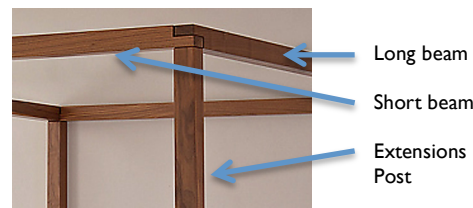

Natural Bed Company

8. Attach the end caps to the sprung slats (see image on the next page): an end-cap slots on to each end of the slat (ensure the slat curves up in the middle and the 'peg' on the end cap points downwards.)
9. Attach the slats to the bed frame by slotting the pegs of the end caps into the predrilled holes, which run along the upper side of the inner side rails/centre rail.



Counting from the headboard end – the fourth slat will be a double slat (made up of an upper standard slat to which is attached a lower second slat via a plastic slider) – see image below. Slats 4-9 will be double slats, the others are standard single slats (see image below).



We hope you enjoy your Natural Bed Company Bed!