



NATURAL BED  
COMPANY

## Orchid Wooden Bed Assembly Instructions for Superking size Four Poster Bed (180x200cm)



### *Items included in the bed flat pack are:*

1 x deep headboard panel	1 x headboard rail
1 x footboard rail	2 x side rails
4 x posts	4 x canopy cross beams
1 x centre rail	
1 x set of sprung beech slats	
1 x set of double sprung beech slats with sliders	
1 x set of plastic end caps (2 per slat)	

Fixings:	12 x threaded bolts	12 x half-moon washers
	12 x nuts	1 x spanner
	26 x wooden dowels	
	4 x silver bolts	1 x hexagon key for silver bolts

1. Place the wooden dowels in the outer holes at the ends of the side rails, headboard and footboard rails, and the deep headboard panel. Tap these in securely. (See images to follow)
2. Screw the 12 threaded bolts into the metal insert nuts located on the four posts (see images to follow)

DEVONSHIRE POINT, 123-125 FITZWILLIAM STREET, SHEFFIELD, S1 4JP


T: 0114 272 1084 E: [enquiries@naturalbedcompany.co.uk](mailto:enquiries@naturalbedcompany.co.uk) [www.naturalbedcompany.co.uk](http://www.naturalbedcompany.co.uk)



NATURAL BED  
COMPANY



3. Next build the headboard: take the two posts that have 4 threaded bolts screwed into them, and attach the deep headboard panel and corresponding headboard rail (which will be numbered) using the half-moon washers and nuts provided.
4. Take the remaining two posts and foot rail and match the numbers to build the footboard in the same way.
5. Attach the side rails to the headboard and footboard posts then loosely secure using the half-moon washer and the nut with the spanner provided (see image below). Ensure the frame is square then fully tighten all of the nuts using the spanner.

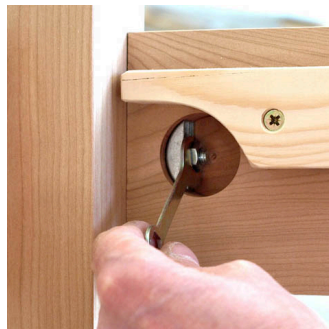

6. Lower the centre rail onto the brackets and push down firmly into position – see second image above.
7. Matching the numbers, place the shorter top cross beams onto the top of the posts across the bed's width. (you may need a second person to hold this in place) Place on top, the long posts along the length of the bed ie from head to foot. Connect the beams to the posts using the long silver bolts, and tighten using the hexagon key.

DEVONSHIRE POINT, 123-125 FITZWILLIAM STREET, SHEFFIELD, S1 4JP

T: 0114 272 1084 E: [enquiries@naturalbedcompany.co.uk](mailto:enquiries@naturalbedcompany.co.uk) [www.naturalbedcompany.co.uk](http://www.naturalbedcompany.co.uk)



NATURAL BED  
COMPANY



← Long beam  
← Short beam

8. Attach the end caps to the sprung slats (see next image): an end-cap slots on to each end of the slat (ensure the slat curves up in the middle and the 'peg' on the end cap points downwards.)
9. Attach the slats to the bed frame by slotting the pegs of the end caps into the predrilled holes, which run along the upper side of the inner side rails/centre rail.



Counting from the headboard end – the fourth slat will be a double slat (made up of an upper standard slat to which is attached a lower second slat via a plastic slider) – see image below. Slats 4-9 will be double slats, the others are standard single slats (see image below).



**We hope you enjoy your Natural Bed Company Bed!**

If you have any queries about the assembly procedure – please call our sales team on 0114 2721984, Mon-Sat 10am-5.30pm

DEVONSHIRE POINT, 123-125 FITZWILLIAM STREET, SHEFFIELD, S1 4JP

T: 0114 272 1984 E: [sales@naturalbedcompany.co.uk](mailto:sales@naturalbedcompany.co.uk) [www.naturalbedcompany.co.uk](http://www.naturalbedcompany.co.uk)