



NATURAL BED
COMPANY

Kulu & Koo Assembly Instructions



Items included in bed flat pack are:

- 1 x headboard panel
- 1 x smaller footboard panel
- 2 x side rails
- 1 x centre rail (not included if you have ordered a single bed)
- 1 x set of sprung beech slats
- 1 x set of plastic end caps (2 per slat)
- (If you have ordered a 90cm or 180cm wide bed – you will receive a double slat system including sliders)

Fixings:	4x threaded bolts	4x half-moon washers
	4x nuts	1x spanner
	8x wooden dowels	

If you have ordered side tables that attach to the bed frame you will also receive:

- 2x panels that form the 2 tables
- 4x silver bolts
- 1x small hexagon key

1. Place the wooden dowels in the outer holes at the ends of the side rails, tap these in securely. (As images to follow) If you have ordered side tables – ensure the end of the side rail with the additional holes for their attachment, is placed at the headboard end.
2. Screw the four threaded bolts into the middle holes of the headboard and footboard panels. (See images to follow)



NATURAL BED
COMPANY




3. Attach the side rails to the footboard panel, then loosely secure using the half-moon washer and the nut with the spanner provided (see image below). In the same way attach the side rails to the headboard to create a full bed frame.



4. Ensure the frame is 'square' then fully tighten all of the nuts using the spanner.
5. Lower the centre rail onto the brackets and push down firmly into position –see second image above (unless you have ordered a single bed; these do not come with a centre rail)


NB: If you have ordered side tables: Connect the table to the headboard, lining up the dowels in the table with the pre-drilled holes in the headboard panel (there are corresponding numbers stamped into the edge of the table and the headboard panel). Pass the silver bolts through the side rail, from inside the frame, into the table and tighten. Repeat this process for the other side table.

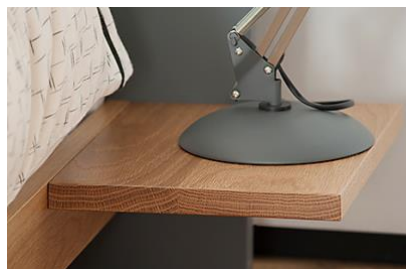



NATURAL BED
COMPANY

6. Attach the end caps to the sprung slats (see image below): an end-cap slots on to each end of the slat (ensure the slat curves up in the middle and the 'peg' on the end cap points downwards.)
7. Attach the slats to the bed frame by slotting the pegs of the end caps into the predrilled holes, which run along the upper side of the inner side rails/centre rail. (See image below)

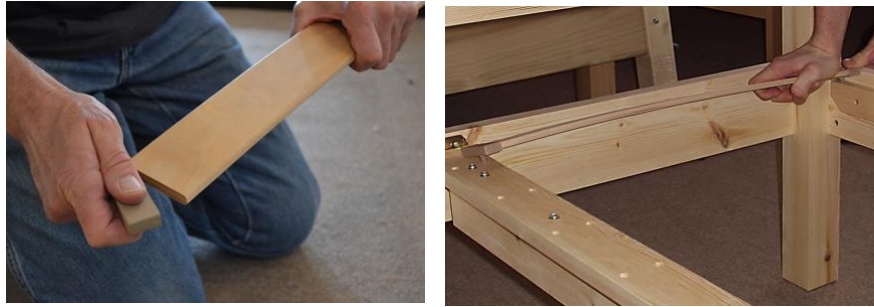

NB: If you have ordered a 90cm or 180cm wide bed you will receive a double slat system. Counting from the headboard end, the fourth slat will be a double slat (made up of an upper standard slat to which is attached a lower second slat via a plastic slider) – see image below.

Slats 4-9 will be double slats, the others are standard single slats (see image to follow).



If you have any queries about the assembly procedure – please call our sales team on 0114 2721984, Mon-Sat 10am-5.30pm. **We hope you enjoy your Natural Bed Company Bed!**